


ANTENNA GASKETS

Installation Instructions

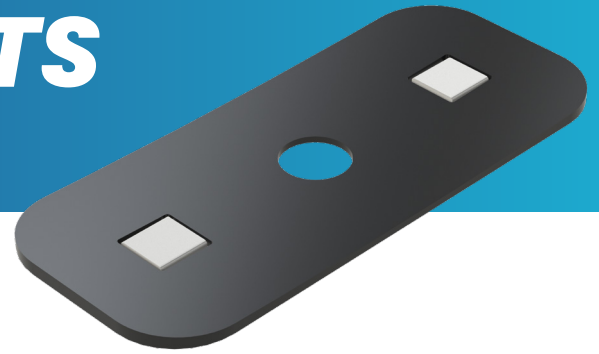

Parsec supplies gaskets for the new 2020 Ford Explorer, and the 2020 Charger on select antennas. The Gaskets make a tighter fit on the grooves of the vehicles so there is no wiggle on the antennas.

Required Items

- Antenna Gasket
- X - Acto Knife
- Conductive Foam (4)
- A Marker

Step 1.

Take the nut and washer off of the antenna. (Figure 1)



FIGURE 1



FIGURE 2

Step 2.

Align the gasket with the antenna and mark the slots using a marker. (Figure 2)

Step 3.

Cut out the newly marked slots with an Exacto and remove the foam in the slots. (Figure 3)



FIGURE 3



FIGURE 4

Step 4.

Peel off the backing paper from the antenna and align the gasket, making sure the flat surface is facing the base. Apply pressure to ensure the 3M adhesive sticks to the gasket. (Figure 4 & 5)

Step 5.

Remove the 3M backing from the conductive foam and place them in the slots making sure they stick to the base of the antenna. (Figure 4 & 5)

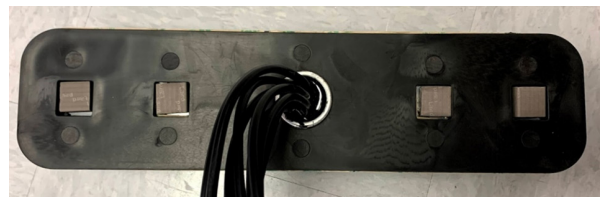


FIGURE 5